
SHOEI COMLINK アダプター

439-JP

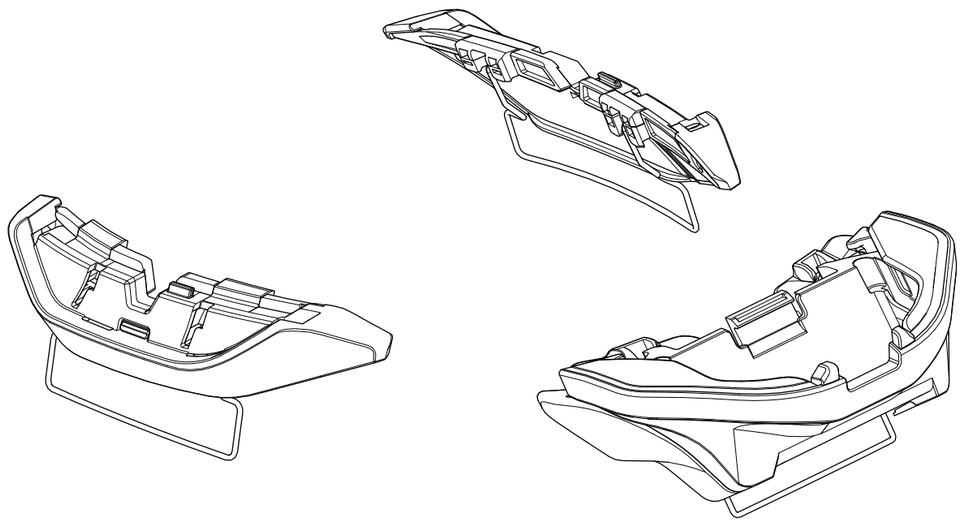

Contents

日本語 1
English 2

株式会社 SHOEI　本社・国内営業部
〒 110-0016 東京都台東区台東 1-31-7　Tel: 03-5688-5180　Fax: 03-3837-8245
製品についてのお問い合わせは、お近くの SHOEI 正規販売店か下記 Web サイトをご覧いただき、お問い合わせください。

SHOEI CO., LTD. HEAD OFFICE
1-31-7 Taito, Taito-ku, Tokyo 110-0016, JAPAN Tel: +81 3 5688 5170 Fax: +81 3 3837 8245
For further information, please consult your local SHOEI distributor or dealer.

shoei.com/worldwide/sales.html

日本語


SHOEI COMLINK アダプター


本製品は、対象のヘルメットに対して、専用インターコムを取り付け可能にするアダプターです。
対象ヘルメット：NXR3 ／ RF-1500 ／ Z-9
本製品の梱包品：サイドアダプター（左／右）、バッテリーアダプター
本作業で必要なもの：布を巻きつけたマイナスドライバーなどの先端が細くて平らなもの
※本取扱説明書内のイラストは、左右両側でそれぞれ着脱する部品については、代表して、ヘルメットをかぶった状態で左側のイラストを掲載しています。
※本書の専用インターコムのイラストは、代表して、SENA 社の「SRL3」を例として掲載しています。
※ご使用になる専用インターコムによっては、サイドアダプターの右側は使用しません。


⚠ •お手入れに、ベンジン、シンナー、ガソリン、その他溶剤は、絶対に使用しないでください。パーツが破損する恐れがあります。


SHOEI COMLINK アダプターの取り付け方法


1. ヘルメット左右のチークパッドを取り外します。
   ※ 使用する専用インターコムによっては、右側のチークパッドは取り外し不要です。
2. バッテリーアダプターに、インターコムのバッテリーを仮置きします（図 1）。
   ※ バッテリーアダプターのツメはまだ取り付けないでください。
3. バッテリーアダプター側面の溝に、バッテリーの配線を通します。
   ヘルメットのサイズに応じて、いずれかのように配線してください。
   ※ L サイズまで：溝の内側に配線（図 2）
   XL サイズ以上：溝の外側に配線（図 3）
4. バッテリーアダプターとバッテリーの配線位置が正しいことを確認して、バッテリーをバッテリーアダプターのツメで取り付けます（図 4）。
   ※ このとき、「カチッ」と音がするまで、しっかりはめてください。
5. サイドアダプターに、インターコムのスイッチユニットを取り付けます。
   スイッチユニット前方のツメを、サイドアダプターのスリットに差し込み、前方のツメを押さえながらスイッチユニット後方のツメを「カチッ」と音がするまで押し込みます（図 5）。
6. バッテリーアダプターをヘルメットに取り付けます。
   バッテリーアダプターのワイヤー部分を、ヘルメットのシェルと衝撃吸収ライナーの隙間に差し込み（図 6）、バッテリー部分を押し込むようにして取り付けます（図 7）。
   ※ 固い場合は、無理やり差し込むのではなく、左右に揺らしながら徐々に押し込んで取り付けてください。
7. 左側のサイドアダプターを取り付けます。
   サイドアダプターのワイヤー部分を、ヘルメットのシェルと衝撃吸収ライナーの隙間に差し込み（図 8）、スイッチユニット部分を押し込むようにして取り付けます（図 9）。
   ※ パーツのフチが、フチゴムの側面に引っ掛かるように取り付けてください。
8. 専用インターコムの配線やパーツを、ヘルメットに取り付けます。
   専用インターコムの取り扱い方法については、使用する専用インターコムの取扱説明書を参照してください。
9. 右側のサイドアダプターも同じ要領で取り付けます。
   ※ 使用する専用インターコムによっては、本作業は不要です。
10. ヘルメットのチークパッドを取り付けます。

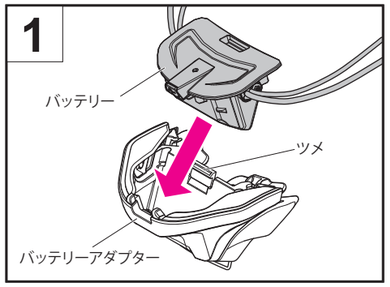


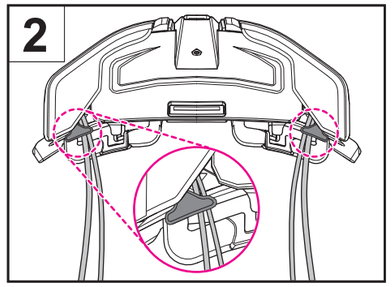


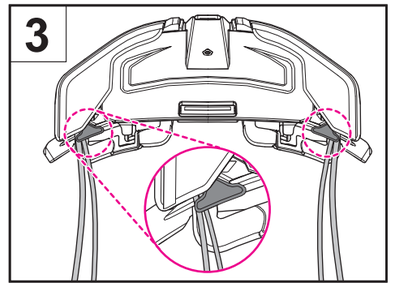


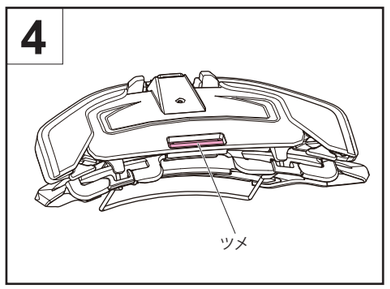


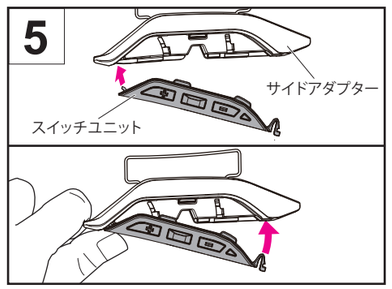

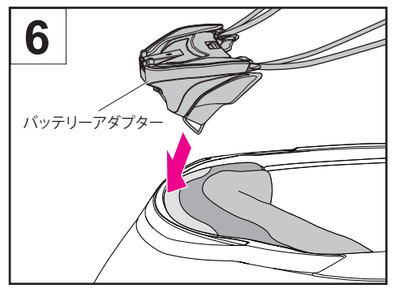

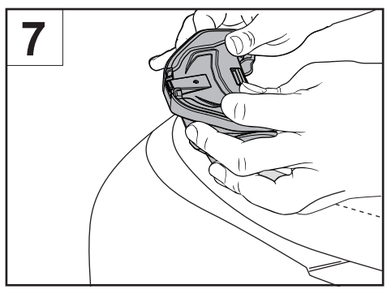

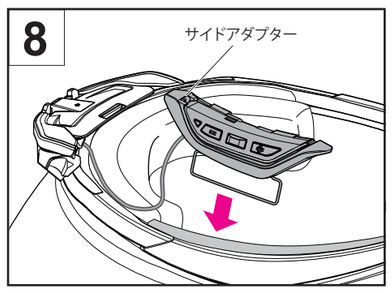


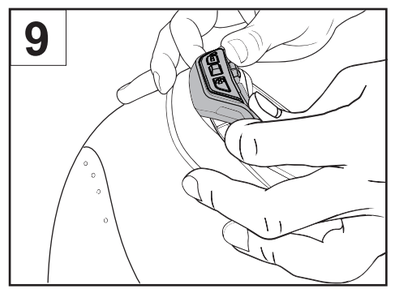



⚠ •SHOEI COMLINK アダプターを使用して、専用インターコムを対象ヘルメットに装着した際に、バッテリーアダプターのゴムが浮き上がることがあります。その際は指でゴムを押し戻してください。


SHOEI COMLINK アダプターの取り外し方法


1. ヘルメット左右のチークパッドを取り外します。
2. ヘルメット左右のサイドアダプターを取り外します（図 10）。
3. インターコムの配線やパーツを取り外します。
   専用インターコムの取り扱い方法については、使用する専用インターコムの取扱説明書を参照してください。
4. ヘルメットからバッテリーアダプターを取り外します（図 11）。
   ※ 固い場合は、無理やり引き抜くのではなく、左右に揺らしながら徐々に引き抜いて取り外してください。
   ※ バッテリーアダプターを引き抜いた際、ヘルメットのフチゴムが引き出されてしまう事があります。その際はフチゴムを布を巻き付けたマイナスドライバーなどで押し込み、元の状態に戻してください。
5. スイッチユニットのツメに布を巻き付けたマイナスドライバーなどを差し込み、テコの要領で倒して、サイドアダプターからスイッチユニットを取り外します（図 12）。
6. バッテリーアダプターのツメに布を巻き付けたマイナスドライバーなどを差し込み、押し込むようにしてツメのロックを解除します（図 13）。
7. バッテリーアダプターのゴムをめくって（図 14）、バッテリーを取り外します（図 15）。
8. ヘルメット左右のチークパッドを取り付けます。

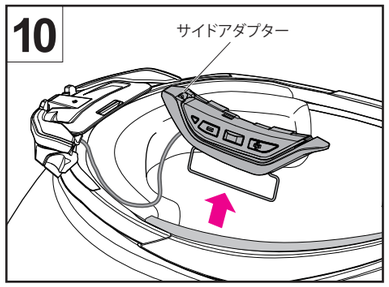


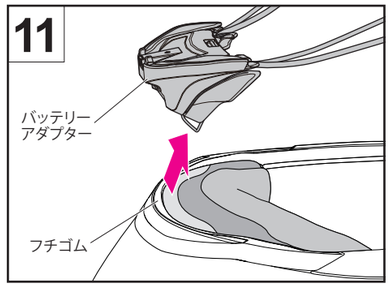

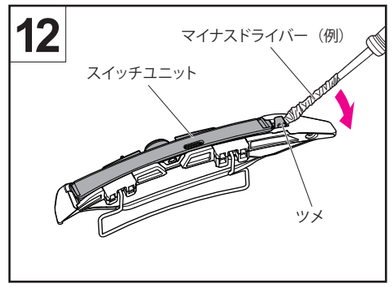

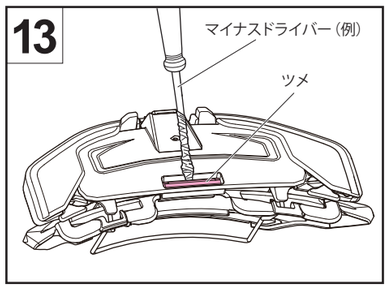

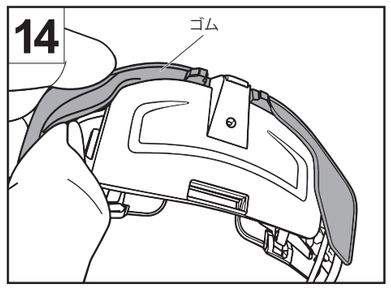

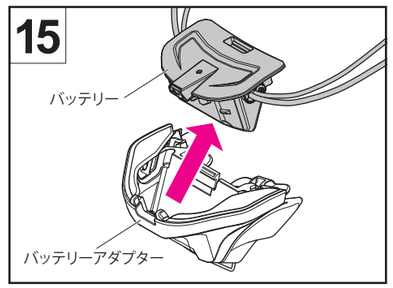

株式会社 SHOEI　本社・国内営業部
〒 110-0016 東京都台東区台東 1-31-7　Tel: 03-5688-5180　Fax: 03-3837-8245

製品についてのお問い合わせは、お近くの SHOEI 正規販売店か下記 Web サイトをご覧いただき、お問い合わせください。
shoei.com/worldwide/sales.html

439-JP
Printed in Japan 20261028
www.shoei.com

English


SHOEI COMLINK Adapter


This product is the adapter required to attach the intercoms specific to the target helmets.
Applicable helmet: NXR3/RF-1500/Z-9
Included with this product: Side adapter (left/right), battery adapter
Items required for this procedure: A flat-ended, thin-tipped object, such as a slotted screwdriver wrapped with a cloth
Note: This manual describes parts that need to be attached or detached separately on both the left and right sides. Illustrations for these parts show the left side only as a reference, with the helmet viewed as if it were being worn.
Note: The illustrations of the specific intercom in this manual show a typical SENA SRL3 as an example.
Note: Depending on the intercom you use, the right side adapter may not be used.


⚠ ● Do not use benzine, thinner, gasoline, or any other solvents for maintenance. Otherwise, parts may be damaged.


Attachment Procedure for SHOEI COMLINK Adapter


1. Remove both the left and right cheek pads from the helmet.
   Note: Depending on the intercom you use, there may be no need to remove the right cheek pad.
2. Temporarily set the intercom battery into the battery adapter (Drawing 1).
   Note: Do not engage the battery adapter tab yet.
3. Put the battery wiring through the side slit of the battery adapter. Select either wiring procedure according to the helmet size.
   Note: Size L or smaller: Use the inner side of the slit (Drawing 2)
   Size XL or larger: Use the outer side of the slit (Drawing 3)
4. Confirm that the wiring for the battery adapter and the battery is correct. Attach the battery to the battery adapter with its tab (Drawing 4).
   Note: During this procedure, firmly engage the tab until it clicks into place.
5. Attach the intercom switch unit to the side adapter as follows. Insert the front tab of the switch unit into the side adapter slit. While pressing the front tab, push the rear tab of the switch unit until it clicks into place (Drawing 5).
6. Attach the battery adapter to the helmet as follows.
   Insert the wire part of the battery adapter between the helmet shell and the impact absorbing liner (Drawing 6) and settle the battery adapter into the helmet while extending the gap between the wire part and the battery unit (Drawing 7).
   Note: If insertion is difficult, do not force the adapter. Instead, push it slowly while rocking it to the left and right.
7. Attach the left side adapter.
   Insert the wire part of the side adapter between the helmet shell and the impact absorbing liner (Drawing 8) and settle the side adapter into the helmet while extending the gap between the wire part and the switch unit (Drawing 9).
   Note: In this step, check that the edge of the switch unit engages with the side of the bottom beading.
8. Install the specific intercom wiring and parts into the helmet.
   For information about handling the specific intercom, please refer to the instruction manual of the intercom you use.
9. Attach the right side adapter in the same manner.
   Note: This procedure may not be required depending on the intercom you use.
10. Install the cheek pads in the helmet.

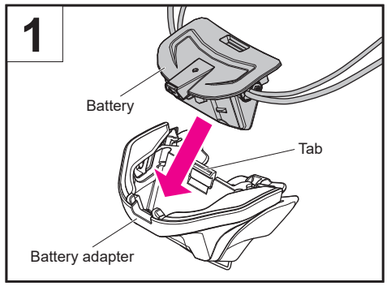


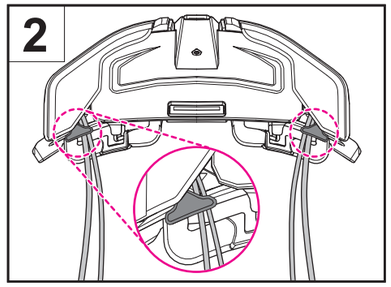


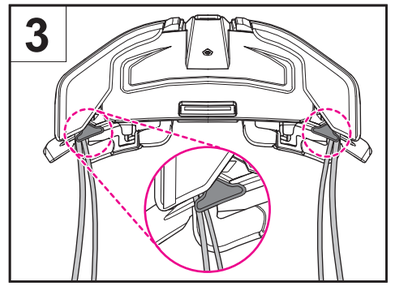


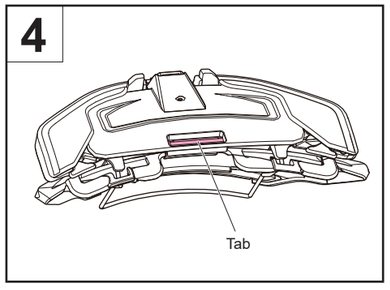


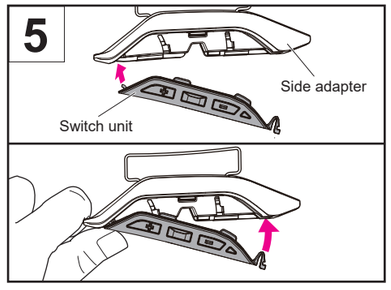

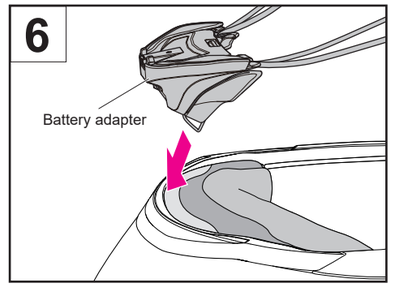

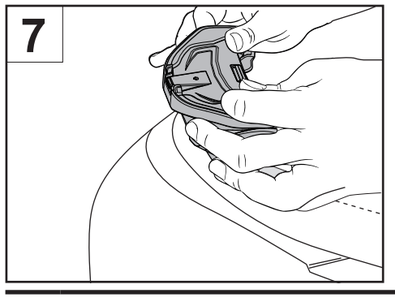

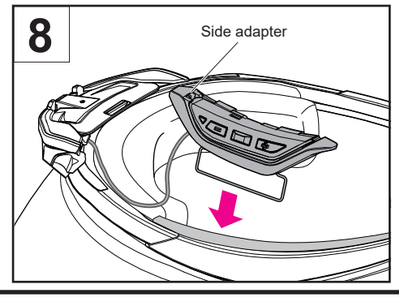


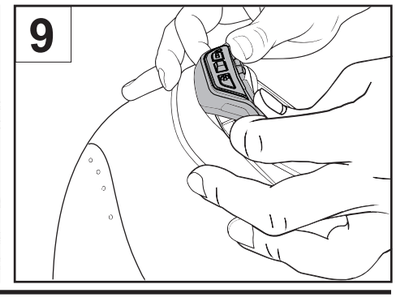



⚠ ● After attaching the specific intercom to your helmet using the SHOEI COMLINK adapter, the battery adapter rubber may be moved upward. If this happens, push the rubber back in place with your fingers.


Removal Procedure for SHOEI COMLINK Adapter


1. Remove both the left and right cheek pads from the helmet.
2. Remove the left and right side adapters from the helmet (Drawing 10).
3. Remove the intercom wiring and parts.
   For information about handling the specific intercom, please refer to the instruction manual of the intercom you use.
4. Remove the battery adapter from the helmet (Drawing 11).
   Note: If removal is difficult, do not force the adapter. Instead, draw it out slowly while rocking it to the left and right.
   Note: When you pull out the battery adapter, the bottom beading may come out. If this happens, use a slotted screwdriver or the like wrapped with a cloth to put the bottom beading back in place.
5. Insert the slotted screwdriver or the like wrapped with a cloth under the switch unit tab and lever the tab upward to remove the switch unit from the side adapter (Drawing 12).
6. Push the chosen tool into the battery adapter tab to unlock it (Drawing 13).
7. Turn over the rubber to remove it from the battery adapter (Drawing 14) and then remove the battery (Drawing 15).
8. Attach the left and right cheek pads to the helmet.

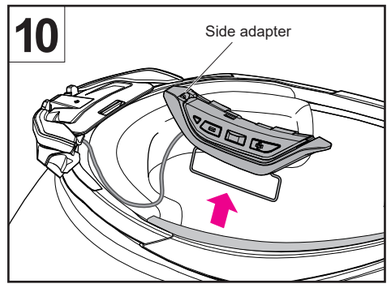


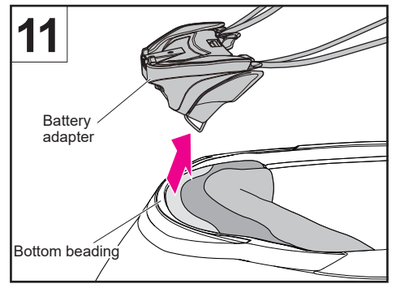

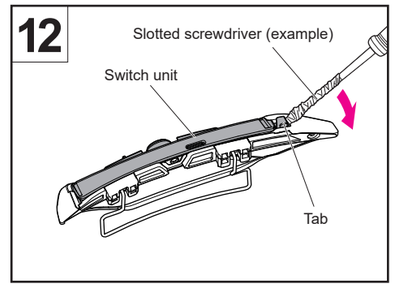

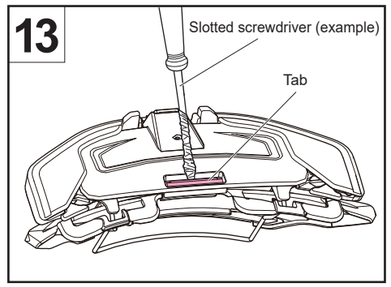

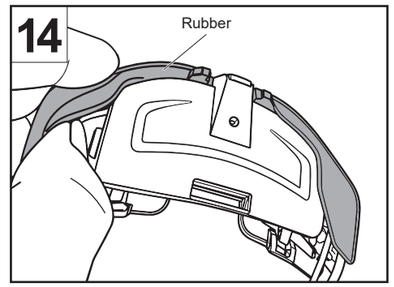

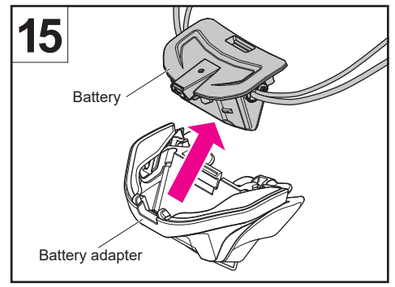

SHOEI CO., LTD. HEAD OFFICE
1-31-7 Taito, Taito-ku, Tokyo 110-0016, JAPAN Tel: +81 3 5688 5170 Fax: +81 3 3837 8245

For further information, please consult your local SHOEI distributor or dealer.

shoei.com/worldwide/sales.html

439-JP
www.shoei.com

Printed in Japan 20261028